

## Advanced Modular 2/4-Channel PID Temperature Controllers

# TMH Series

## INSTRUCTION MANUAL

<p>TCD230056AC</p>	<p><b>Autonics</b></p>
--------------------	------------------------

Thank you for choosing our Autonics product.

**Read and understand the instruction manual and manual thoroughly before using the product.**

**For your safety, read and follow the below safety considerations before using.**

**For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.**

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc are subject to change without notice for product improvement
Some models may be discontinued without notice.

Follow Autonics website for the latest information.

Safety Considerations
<ul style="list-style-type: none"><li>Observe all ‘Safety Considerations’ for safe and proper operation to avoid hazards.</li> <li>⚠ symbol indicates caution due to special circumstances in which hazards may occur.</li></ul>
⚠ Warning
<p>Failure to follow instructions may result in serious injury or death</p>

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)**

Failure to follow this instruction may result in personal injury, economic loss or fire.
- Do not use or store the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.**

Failure to follow this instruction may result in explosion or fire.
- Install the device in panel to use.**

Failure to follow this instruction may result in fire.
- Do not connect, repair, or inspect the unit while connected to a power source.**

Failure to follow this instruction may result in fire.
- Check 'Connections' before wiring.**

Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.**

Failure to follow this instruction may result in fire.

⚠ Caution
<p>Failure to follow instructions may result in injury or product damage</p>

- When connecting the power input and relay output, use AWG 20 (0.50 mm<sup>2</sup>) cable or over and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N·m for screw type.**

**When connecting the sensor input and communication cable without dedicated cable, use AWG 24 to 12 cable for screwless type , use AWG 28 to 16 cable for screw type, and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N·m for screw type.**

Failure to follow this instruction may result in fire or malfunction due to contact failure.
- Use the unit within the rated specifications.**

Failure to follow this instruction may result in fire or product damage
- Use a dry cloth to clean the unit, and do not use water or organic solvent.**

Failure to follow this instruction may result in fire or electric shock.
- Keep the product away from metal chip, dust, and wire residue which flow into the unit.**

Failure to follow this instruction may result in fire or product damage.

### Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Check the polarity of the terminals before wiring the temperature sensor. For RTD temperature sensor, wire it as 3-wire type, using cables in same thickness and length. For thermocouple (CT) temperature sensor, use the designated compensation wire for extending wire.
- The connection of this unit should be separated from the power line and high voltage line in order to prevent inductive noise. In case of installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line. The connection of this unit should be separated from the power line and high voltage line in order to prevent inductive noise.
- Do not apply excessive power when connecting or disconnecting the connectors of the product.
- Switch or circuit breaker should be installed nearby users for convenient control.
- Do not use the unit for other purpose (e.g. voltmeter, ammeter), but temperature controller.

- When changing the input sensor, turn off the power first before changing. After changing the input sensor, modify the value of the corresponding parameter.
- Power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Do not overlapping communication line and power line. Use twisted pair wire for communication line and connect ferrite bead at each end of line to reduce the effect of external noise.
- Make a required space around the unit for radiation of heat. For accurate temperature measurement, warm up the unit over 20 min after turning on the power.
- Mounting multiple devices in any way other than the specified mounting method may cause heat to build up inside, which will shorten their service life. If there is a possibility of the ambient temperature rising to a temperature above the specified temperature range, take steps, such as installing fans, to cool the device. Be sure that the cooling method in not cooling just the terminal block. If only the terminal block is cooled, measurement errors may occur.
- Make sure that power supply voltage reaches to the rated voltage within 2 sec after supplying power.
- Do not wire to terminals which are not used.
- Install DIN rail vertically from the ground.
- This unit may be used in the following environments.
  - Indoors (in the environment condition rated in 'Specifications')
  - Altitude max 2,000 m
  - Pollution degree 2
  - Installation category II

Ordering Information
<p>This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.</p>
Control module
T M H ① - ② ③ ④ - ⑤

<p><b>① Module</b> 2: Control 2 channels 4: Control 4 channels</p>	<p><b>② Power supply</b> 2: 24 VDC</p>
<p><b>③ Option Input/Output</b> 2: Alarm output 1/2 (Module: 2) 4: Alarm output 1/2/3/4 (Module: 2) N: None (Module: 4)</p>	<p><b>④ Control output</b> R: Relay output S: SSR drive output C: Selectable current or SSR drive output</p>
<p><b>⑤ Terminal type</b> None: Screw L: Screwless</p>	

Option module
T M H ① - ② ③ ④ - ⑤

<p><b>① Module</b> A: Analog input/output E: Digital input/Alarm output CT: CT input</p>	<p><b>② Power supply</b> 2: 24 VDC</p>
<p><b>③ Option Input/Output</b> 4: Analog 1 to 4 (Module: A) 8: Digital input 1 to 8, Alarm output 1 to 8 (Module: E) 8: CT input 1 to 8 (Module: CT)</p>	<p><b>④ Output</b> A: Transmission output R: Relay output N: None</p>
<p><b>⑤ Terminal type</b> None: Screw L: Screwless</p>	

Communication module
T M H ① - ② ③ ④ - ⑤

<p><b>① Module</b> C: Communication</p>	<p><b>③ Communication</b> E: Ethernet L: PLC Ladderless</p>
<p><b>② Option Input/Output</b> 2: Communication output COM1+ COM2</p>	<p><b>⑤ Terminal type</b> None: Screw L: Screwless</p>
<p><b>③ Power supply</b> 2: 24 VDC</p>	

Firmware Version and Manual
<p>Additional settings may be required if the firmware version is different between the connected modules. Please refer to the user manual and the user manual for communication, and be sure to follow cautions written in the technical descriptions. Visit our website (www.autonics.com) to download manuals.</p>

Software
<p>Download the installation file and the manuals from the Autonics website.</p>
DAQMaster
<p>DAQMaster is comprehensive device management program. It is available for parameter setting, monitoring.</p>

Product Components
<ul style="list-style-type: none"><li>Product (+ bracket)</li> <li>Expansion connector × 1</li> <li>[Screwless type] 5-pin connector× 4</li> <li>Instruction manual</li> <li>Module lock connector × 2</li></ul>

Sold Separately
<ul style="list-style-type: none"><li>Current transformer (CT) <ul style="list-style-type: none"><li>CT connector cable: CICT4-□</li></ul></li> <li>Communication Converters: SCM-USP / SCM-38I / SCM-US48I / SCM-WF48 <ul style="list-style-type: none"><li>Terminal Protection Cover: TMH-COVER</li></ul></li></ul>

Specifications		
Control module		
Model		
No. of channels		
Sampling period		
Input specification		
CT input	<ul style="list-style-type: none"><li>0.0 - 50.0A (primary current measurement range)</li> <li>CT ratio: 1/1,000, • Measurement accuracy: ±5% F.S. ±1 digit</li></ul>	
Digital input	<ul style="list-style-type: none"><li>Connect input ON: ≤ 1 kΩ, OFF: ≥ 100 kΩ</li> <li>Solid state input Residual voltage: ≤ 0.9 V, Leakage current: ≤ 0.5 mA</li> <li>Outflow current: ≈ 0.3 mA per input</li></ul>	-
Control type		
Heating, cooling, heating & cooling: ON/OFF, P, PI, PD, PID control		




Control output	<ul style="list-style-type: none"><li>Relay: 250 VAC~ 3 A 1a mechanical life cycle: ≥ 10,000,000 operations, electrical life cycle: ≥ 100,000 operations</li> <li>SSR: 12 VDC± 3 V, ≤ 20 mA</li> <li>Current<sup>01)</sup>: DC 4 - 20 mA or DC 0 - 20 mA (Load: ≤ 500 Ω)</li></ul>				
Alarm output	250 VAC~ 3 A 1a Mechanical life cycle: ≥ 10,000,000 operations Electrical life cycle: ≥ 100,000 operations	-			
Communication					
Modbus RTU					
Hysteresis					
<ul style="list-style-type: none"><li>Thermocouple / RTD: 1 to 100 (0.1 to 100.0) °C/°F</li> <li>Analog: 1 to 100 digit</li></ul>					
Proportional band (P)					
<ul style="list-style-type: none"><li>Thermocouple / RTD: 0.1 to 999.9 °C/°F</li> <li>Analog: 0.1 to 999.9 %</li></ul>					
Integral time (I)					
Derivative time (D)					
<ul style="list-style-type: none"><li>Relay output, SSR drive output: 0.1 to 120.0 sec</li> <li>Selectable current or SSR drive output: 1.0 to 120.0 sec</li></ul>					
Control period (T)					
0 to 100 (0.0 to 100.0) %					
Insulation type					
Double insulation or reinforced insulation (mark: □, dielectric strength between the measuring input part and the power part: 1 kV)					
Unit weight (packaged)					
<table> <tbody><tr> <td>≈ 174 g (≈ 249 g)</td> <td>≈ 162 g (≈ 261 g)</td> <td>≈ 154 g (≈ 229 g)</td> <td>≈ 151 g (≈ 250 g)</td></tr> </tbody></table>	≈ 174 g (≈ 249 g)	≈ 162 g (≈ 261 g)	≈ 154 g (≈ 229 g)	≈ 151 g (≈ 250 g)	
≈ 174 g (≈ 249 g)	≈ 162 g (≈ 261 g)	≈ 154 g (≈ 229 g)	≈ 151 g (≈ 250 g)		

01) When the control output is set to the current output, the heater current value monitoring function through the CT input terminals is not available.

Option module			
Model			
No. of channels			
Sampling period			
Input specification			
Transmission output			
Communication			
Insulation type			
Unit weight (packaged)			
<table> <tbody><tr> <td>≈ 160 g (≈ 235 g)</td> <td>≈ 148 g (≈ 247 g)</td></tr> </tbody></table>	≈ 160 g (≈ 235 g)	≈ 148 g (≈ 247 g)	
≈ 160 g (≈ 235 g)	≈ 148 g (≈ 247 g)		

Model					
No. of I/O points					
8 points					
Input specification					
<ul style="list-style-type: none"><li>- Digital input</li> <li>• Connect input ON: ≤ 1 kΩ, OFF: ≥ 100 kΩ</li> <li>• Solid state input Residual voltage: ≤ 0.9 V, Leakage current: ≤ 0.5 mA</li> <li>• Outflow current: ≈ 0.3 mA per input</li></ul>	<ul style="list-style-type: none"><li>- CT input</li> <li>• 0.0-50.0 A (primary current measurement range)</li> <li>• CT ratio: 1/1,000</li> <li>• Measurement accuracy: ±5% F.S. ±1 digit</li></ul>				
Alarm output					
250 VAC~ 3 A 1a, <ul style="list-style-type: none"><li>• Mechanical life cycle: ≤ 10,000,000 operations</li> <li>• Electrical life cycle: ≤ 100,000 operations</li></ul>	-				
Communication					
Modbus RTU					
Insulation type					
Double insulation or reinforced insulation (mark: □, dielectric strength between the measuring input part and the power part: 1 kV)					
Unit weight (packaged)					
<table> <tbody><tr> <td>≈ 163 g (≈ 239 g)</td> <td>≈ 151 g (≈ 250 g)</td> <td>≈ 144 g (≈ 219 g)</td> <td>≈ 133 g (≈ 232 g)</td></tr> </tbody></table>	≈ 163 g (≈ 239 g)	≈ 151 g (≈ 250 g)	≈ 144 g (≈ 219 g)	≈ 133 g (≈ 232 g)	
≈ 163 g (≈ 239 g)	≈ 151 g (≈ 250 g)	≈ 144 g (≈ 219 g)	≈ 133 g (≈ 232 g)		

Communication module				
Model				
Communi-cation				
Insulation type				
Unit weight (packaged)				
<table> <tbody><tr> <td>≈ 147 g (≈ 222 g)</td> <td>≈ 137 g (≈ 236 g)</td> <td>≈ 129 g (≈ 204 g)</td></tr> </tbody></table>	≈ 147 g (≈ 222 g)	≈ 137 g (≈ 236 g)	≈ 129 g (≈ 204 g)	
≈ 147 g (≈ 222 g)	≈ 137 g (≈ 236 g)	≈ 129 g (≈ 204 g)		

Common
Power supply
24 VDC≒
Permissible voltage range
90 to 110% of rated voltage
Power Consumption
≤ 5 W (for max. load)
Display type
None- parameter setting and monitoring is available at external devices
Memory retention
≈ 10 years (non-volatile semiconductor memory type)
Insulation resistance
100 MΩ (500 VDC≒ megger)
Dielectric strength
Between the charging part and the case: 1,000 VAC~ 50/60 Hz for 1 min
Vibration
0.75mm amplitude at frequency of 5 to 55Hz in each X, Y, Z direction for 2 hours
Noise immunity
Square shaped noise by noise simulator (pulse width 1 μs) ±0.5 kV
Ambient temperature
-10 to 50 °C, storage: -20 to 60 °C (no freezing or condensation)
Ambient humidity
35 to 85%RH, Storage: 35 to 85%RH (no freezing or condensation)
Protection structure
IP20 (IEC standard)
Certification
<p>CE   </p>

Input Specifications
Input type and range
The setting range of some parameters is limited when using the decimal point display.
Input type
Decimal point
Display Method
Input range (°C)
Input range (°F)

Thermo-couple	K (CA)	1	K (CA) .H	-200 to 1,350	-328 to 2,462
		0.1	K (CA) .L	-200.0 to 1,350.0	-328.0 to 2462.0
	J (IC)	1	J (IC) .H	-200 to 800	-328 to 1,472
		0.1	J (IC) .L	-200.0 to 800.0	-328.0 to 1472.0
	E (CR)	1	E (CR) .H	-200 to 800	-328 to 1,472
		0.1	E (CR) .L	-200.0 to 800.0	-328.0 to 1,472.0
	T (CC)	1	T (CC) .H	-200 to 400	-328 to 752
		0.1	T (CC) .L	-200.0 to 400.0	-328.0 to 752.0
	B (PR)	1	B (PR)	0 to 1,800	32 to 3,272
		1	R (PR)	0 to 1,750	32 to 3,182
	S (PR)	1	S (PR)	0 to 1,750	32 to 3,182
		1	N (NN)	-200 to 1,300	-328 to 2,372
C (TT)	1	C (TT)	0 to 2,300	32 to 4,172	
	1	G (TT)	0 to 2,300	32 to 4,172	
L (IC)	1	L (IC) .H	-200 to 900	-328 to 1,652	
	0.1	L (IC) .L	-200.0 to 900.0	-328.0 to 1,652.0	
U (CC)	1	U (CC) .H	-200 to 400	-328 to 752	
	0.1	U (CC) .L	-200.0 to 400.0	-328.0 to 752.0	
RTD	Platinel II	1	PLII	0 to 1,390	32 to 2,534
	Cu50 Ω	0.1	CU 50	-200.0 to 200.0	-328.0 to 392.0
		Cu100 Ω	0.1	CU 100	-200.0 to 200.0
	JPt100 Ω	1	JPt100.H	-200 to 650	-328 to 1,202
		0.1	JPt100.L	-200.0 to 650.0	-328.0 to 1,202.0
	DPt50 Ω	0.1	DPt50.L	-200.0 to 600.0	-328.0 to 1,112.0
		DPt100 Ω	1	DPt100.H	-200 to 650
	0.1		DPt100.L	-200.0 to 650.0	-328.0 to 1,202.0
	NickeI120 Ω	1	NI12	-80 to 260	-112 to 500
	Analog	0 to 10 V	-	AV1	0 ~ 10 V
		0 to 5 V	-	AV2	0 ~ 5 V
		1 to 5 V	-	AV3	1 ~ 5 V
0 to 100 mV		-	AMV1	0 ~ 100 mV	
0 to 20 mA		-	AMA1	0 ~ 20 mA	
4 to 20 mA		-	AMA2	4 ~ 20 mA	

• Permissible line resistance per line: ≤ 5 Ω

Measurement accuracy			
Input type			
Using temperature			
Terimal type			
Measurement accuracy			
Thermo-couple	At room temperature (23 ±5 °C)	Screw	(PV ±0.3% or ±1 °C higher one) ±1-digit
			<ul style="list-style-type: none"><li>Thermocouple K, J, T, N, E below -100 °C and L, U, PLII, RTD Cu50 Ω, DPt50 Ω: (PV ±0.3% or ±2 °C higher one) ±1-digit</li> <li>Thermocouple C, G and R, S below 200 °C: (PV ±0.3% or ±3 °C higher one) ±1-digit</li> <li>Thermocouple B below 400°C: there is no accuracy standards</li></ul>
RTD		Screwless	(PV ±0.5% or ±1 °C higher one) ±1-digit
			<ul style="list-style-type: none"><li>Thermocouple K, J, T, N, E below -100 °C and L, U, PLII, RTD Cu50 Ω, DPt50 Ω: (PV ±0.5% or ±2 °C higher one) ±1-digit</li> <li>Thermocouple C, G and R, S below 200 °C: (PV ±0.5% or ±3 °C higher one) ±1-digit</li> <li>Thermocouple B below 400°C: there is no accuracy standards</li></ul>
	Out of room temperature range		(PV ±0.5% or ±2 °C higher one) ±1-digit
			<ul style="list-style-type: none"><li>RTD Cu50 Ω, DPt50 Ω: (PV ±0.5% or ±3 °C higher one) ±1-digit</li> <li>Thermocouple R, S, B, C, G: (PV ±0.5% or ±5 °C higher one) ±1-digit</li> <li>Other sensors: ≤ ±5 °C (≤-100 °C)</li></ul>
Analog	At room temperature (23 ±5 °C)		±0.3% F.S. ±1-digit
	Out of room temperature range		±0.5% F.S. ±1-digit

• Connecting 1 or more module can vary measurement accuracy about ±1°C, regardless of the number of connected module.

## Communication Setting

### Interface

Module	Control	Option	Communication	
Series	TMH2/4	TMHA, TMHE, TMHCT	TMHC-22L	TMHC-22E
Protocol	Modbus RTU		Modbus RTU, PLC Ladderless communication	Modbus TCP
Comm. method	RS485		RS422, RS485	Ethernet (10/100BaseT)
PC loader	TTL (Protocol: Modbus RTU)			
Maximum connection	32 units (address: 01 to 32) • 16 units in case of connecting TMHC module (address: 01 to 16)	16 units per each module	Control module 16 units, option module 16 units per each module (32 units in total)	
Synchronization	Asynchronous			
Connection method	Two-wire half duplex			
Comm. effective range	≤ 800 m			
Comm. speed	4,800 / 9,600 (default) / 19,200 / 38,400 / 115,200 bps (parameter)			10/100 Mbps
Response time	5 to 99 ms (default: 20 ms)			
Start bit	1 bit (fixed)			
Data bit	8 bit (fixed)			
Parity bit	None (default), Odd, Even			
Stop bit	1 bit, 2 bit (default)			
EEPROM life cycle	≈ 1,000,000 operations (Erase / Write)			

- When changing the setting value related to communication interface, reboot the device for normal operation.
- It is recommended to use Autonics communication converter. Please use twisted pair wire, which is suitable for RS485 communication.

### Address

Set the communication address with the communication address setting switch (SW1, default: 1) and communication address group switch (SW2, default: +0, TMH2/4 Series).

Series	SW1																
	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F	
TMH2/4	+0	16	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15
	+16	32	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
TMHC	16	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	
TMHA	48	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	
TMHE	64	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	
TMHCT	80	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	

- When connecting TMHC and TMH2/4 to master separately, communication address can be duplicated, but if they communicate with master at the same time, communication address must not be duplicated to avoid error. (use address TMHC: 1 to 16, TMH2/4: 17 to 32)


### Mac address [Ethernet communication module]

It is possible to check Mac address for Ethernet communication at DAQMaster. Refer to the manual for the details.

### DIP switch setting [Ladderless communication module]

After separating base terminal block, set communication speed, stop bit, PLC connection and protocol by using a internal DIP switch.

- Setting values are applied to COM1 only, default: All switches OFF (following parameter setting)

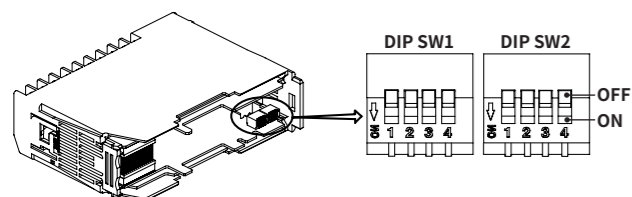


DIP SW1		Communication speed	Stop bit		
1	2	3	4		
OFF	OFF	Following parameter setting	OFF	OFF	Following parameter setting
OFF	ON	19,200 bps	OFF	ON	Stop bit: 1 bit
ON	OFF	38,400 bps	ON	OFF	Stop bit: 2 bit
ON	ON	115,200 bps	ON	ON	-

DIP SW2		PLC connection and protocol		
1	2	3	4	
OFF	OFF	OFF	OFF	Following parameter setting
OFF	OFF	OFF	ON	Modbus RTU
OFF	OFF	ON	OFF	LS MASTER-K Series special protocol
OFF	OFF	ON	ON	LS GLOFA-GM Series special protocol
OFF	ON	OFF	OFF	LS XGT/XGB Series special protocol
OFF	ON	OFF	ON	MITSUBISHI MELSEC Series special protocol Q/QnACPU common command (1401/0401)
OFF	ON	ON	OFF	MITSUBISHI MELSEC Series special protocol ACPU common command (WW/WR)
OFF	ON	ON	ON	OMRON SYSMAC Series special protocol
ON	OFF	OFF	OFF	MITSUBISHI MELSEC3 Series special protocol

## Installation Method


### Separating base terminal block

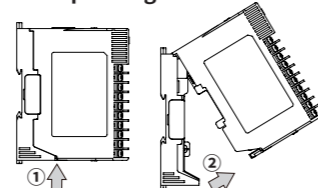

1. Push the lock lever at ①.
2. Pull the body of the module to ② direction.

- When connecting base terminal block, align the upper concave part (□) of the body and the upper convex part (△) of the base, then lower it vertically to connect it. If the upper parts are not align correctly, it may damage to the inner connector.


### Connection between modules

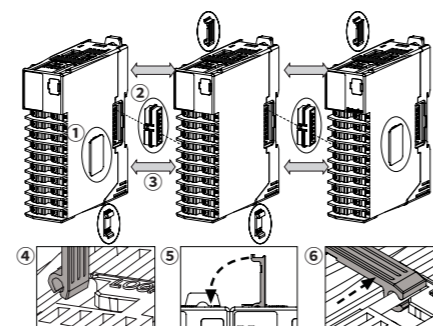

1. Remove END cover (①) of each module (except END cover of the first and last module).
2. ② Insert expansion connector (②) and connect them tightly to ③ direction (max. 31 units).
3. Insert module lock connector (④) to lock connector hole (⑤).
4. Push module lock connector to the lock direction (⑥).

- Supply power to the rear power terminal of only one of the connected modules. Supply adequate power for power input specifications and overall capacity. (Max. power when connecting 32 modules: 32 × 5 W = 160 W)


### Mounting with bolts

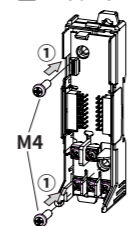

1. Refer to 'Separating base terminal block' to separate base terminal block.
  2. Install the module by using M4 screws to the ① direction of the inside mounting hole.
- Refer to the 'Dimensions' to check hole positions and dimensions of inside mounting hole.


### Mounting on DIN rail

#### - Installation

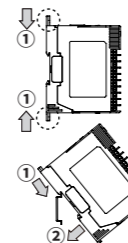

1. Press the rail lock at the top / bottom of the module to the ① direction.
2. Hang the top rail lock to DIN rail.
3. Push to ① direction and press to ② direction.

#### - Separation

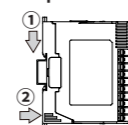


1. Press the module to ① direction.
2. Keep it pressed and pull it to ② direction.

### Precautions

- Install the module vertically.
- Use end plates (sold separately, not available from Autonics) to fix firmly.

## Dimensions


- Unit: mm, For the detailed drawings, follow the Autonics website.

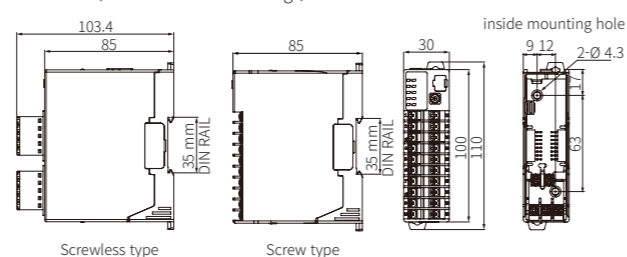


## Terminal

- Unit: mm, Use the terminal of follow shape.

### Screw: Crimp terminal

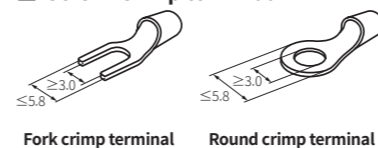

### Screwless: Wire ferrule




Fork crimp terminal

Round crimp terminal

## Connections


- Do not arbitrarily remove the terminal screws, and use them after fully tightening them.
- Failure to follow this instruction may result in malfunction due to contact failure.

### Control module

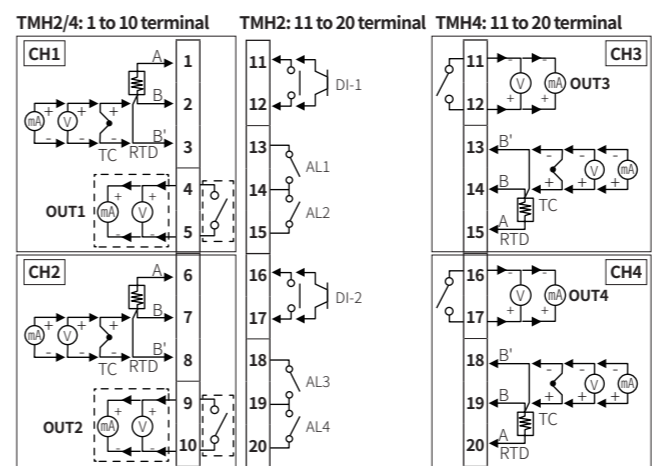


Terminal	Function 1	Function 2	Terminal	Function	Terminal	Function 1	Function 2
1		A	11	Digital input 1	11	CH3 output	Relay, current, SSR
2	CH1 input	B	12	Alarm output 1	12	CH3 output	TC, current, voltage
3		B'	13	Alarm output 1	13	CH3 input	B' TC, current, voltage
4	CH1 output	+	14	Alarm output 2	14	CH3 input	B current, voltage
5		-	15	Alarm output 2	15	15	A
6		A	16	Digital input 2	16	CH4 output	Relay, current, SSR
7	CH2 input	B	17	Alarm output 3	17	CH4 output	TC, current, voltage
8		B'	18	Alarm output 3	18	CH4 input	B' TC, current, voltage
9	CH2 output	+	19	Alarm output 4	19	CH4 input	B current, voltage
10		-	20	Alarm output 4	20	20	A

### CT input terminals on the top

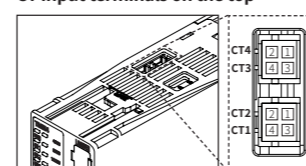

### Power/Comm. terminal on the back

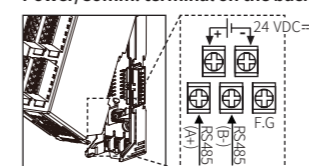


### CT connector cable (CICT4-□, sold separately)

Pin	Cable color	CT connection
1	Brown	CT 2 / CT 4
2	Blue	CT 2 / CT 4
3	White	CT 1 / CT 3
4	Black	CT 1 / CT 3


### Option module

#### TMHA [Analog input / output]

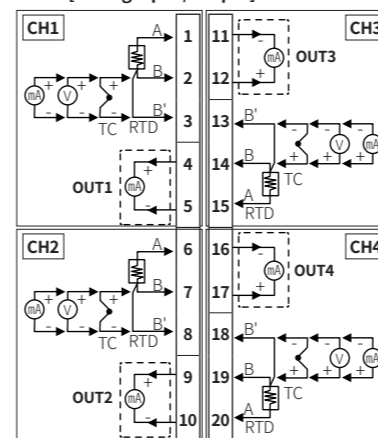


Terminal	Function 1	Function 2	Terminal	Function 1	Function 2
1		A	11	CH3 input	Relay, current, SSR
2	CH1 input	B	12	CH3 input	TC, current, voltage
3		B'	13	CH3 input	B' TC, current, voltage
4	CH1 output	+	14	CH3 input	B current, voltage
5		-	15	15	A
6		A	16	CH4 output	Relay, current, SSR
7	CH2 input	B	17	CH4 output	TC, current, voltage
8		B'	18	CH4 input	B' TC, current, voltage
9	CH2 output	+	19	CH4 input	B current, voltage
10		-	20	20	A

### TMHE [Digital input / Alarm output]

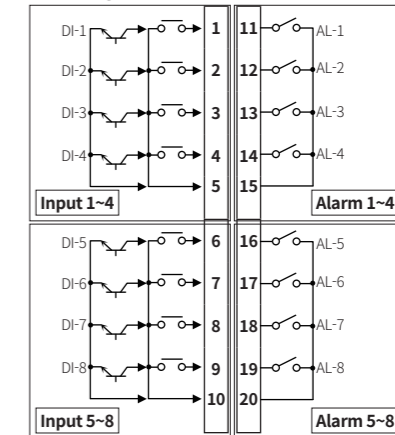


Terminal	Function
1	Digital input 1
2	Digital input 2
3	Digital input 3
4	Digital input 4
5	Ground
6	Digital input 5
7	Digital input 6
8	Digital input 7
9	Digital input 8
10	Ground
11	Alarm output 1
12	Alarm output 2
13	Alarm output 3
14	Alarm output 4
15	Ground
16	Alarm output 5
17	Alarm output 6
18	Alarm output 7
19	Alarm output 8
20	Ground


### TMHCT [CT input]

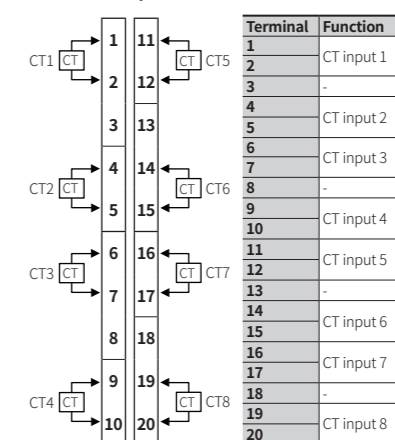

### Power/Comm. terminal on the back

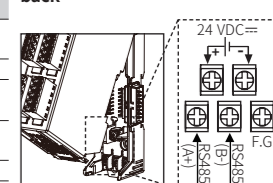

### Communication module

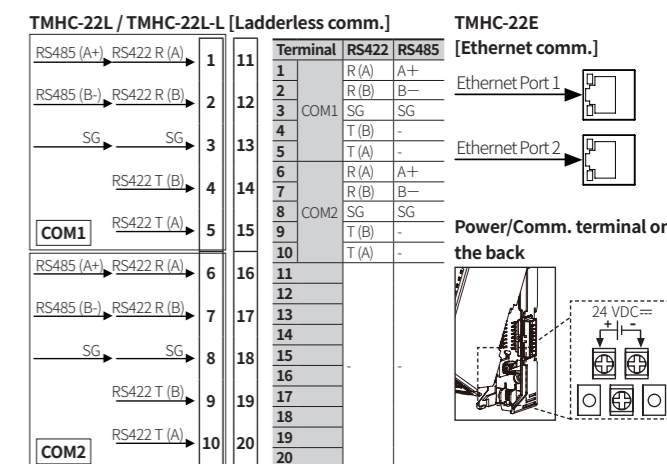

## Errors

### Indicator

Name	Status	Color	Description	Troubleshooting
PWR	ON	Red	□ channel error: Input < Input range, Input > Input range	When the error factor is resolved, it automatically returns to normal operation.
CH□	Flash (0.5)	Red	Input sensor is open or not connected	

01) Cycle: 0.5 sec

### Communication output, DAQMaster

Communication output (decimal)	DAQMaster	Description	Troubleshooting
'31000'	Display 'OPEN'	Input sensor is open or not connected	When the error factor is resolved, it automatically returns to normal operation.
'30000'	Display 'HHHH' (01)	Input > Input range	
'30000'	Display 'LLLL' (01)	Input < Input range	
'31500'	Display '31500'	Sensor internal communication error	Check the power supply (24VDC=).

- When HHHH / LLLL error occurs, the control output may occur by recognizing the maximum or minimum input depending on the control type. Please be careful.
- This error may occur when connecting only the loader port.